

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Киргизия (ак)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Казахстан (772)734-952-31

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

www.aeg.nt-rt.ru | | age@nt-rt.ru

Технические характеристики на программное обеспечение для выключения и управления Compuwatch бренда AEG Power Solutions

TABLE OF CONTENTS

TABLE OF CONTENTS	3
1. GENERAL	4
2. INSTALLATION	4
2.1 Download.....	4
2.2 Installation	4
3. CONFIGURATION	10
4. UPS VIEWER.....	11

1. GENERAL


The UPS Management Software is a client/server application for networks and local workstations. The server module of the UPS Management Software is UPSMAN, which communicates via RS-232 or USB cable with the UPS. When UPSMAN starts, it collects the protocol messages from the UPS as a background program (service). UPSMAN interprets received messages and makes them available to the client module, a webserver interface UPS View, the WINDOWS UPSMON, JAVAMON or to any other SNMP application.

In combination with RCCMD("Remote Console Command") you are able to provide a simultaneous shutdown of several servers that are all supported by the same UPS.

2. INSTALLATION

2.1 Download


Get the newest Compuwatch Software („UPSMAN“) from homepage www.aegps.com. You will find the installation file **upswincd.zip** in your download folder:

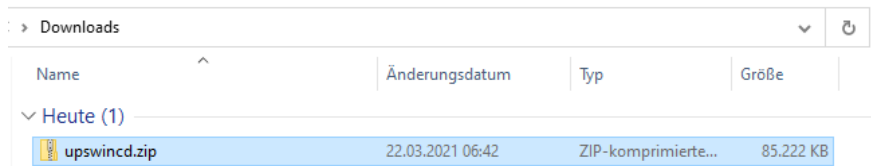

Name	Änderungsdatum	Typ	Größe
upswincd.zip	22.03.2021 06:42	ZIP-komprimierte...	85.222 KB

2.2 Installation


Open the ZIP-File in download folder and start the installation with a double click on **installupsman.exe**:

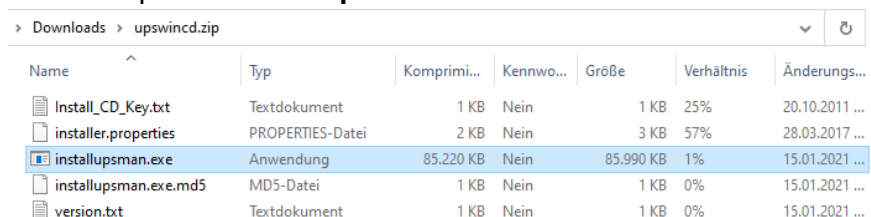

Name	Typ	Komprimi...	Kennwo...	Größe	Verhältnis	Änderungs...
Install_CD_Key.txt	Textdokument	1 KB	Nein	1 KB	25%	20.10.2011 ...
installer.properties	PROPERTIES-Datei	2 KB	Nein	3 KB	57%	28.03.2017 ...
installupsman.exe	Anwendung	85.220 KB	Nein	85.990 KB	1%	15.01.2021 ...
installupsman.exe.md5	MD5-Datei	1 KB	Nein	1 KB	0%	15.01.2021 ...
version.txt	Textdokument	1 KB	Nein	1 KB	0%	15.01.2021 ...

You must extract the ZIP file before you can start the installation. Extract the file, choose a folder and follow the instructions.

Start **installupsman.exe** from your extracted folder as administrator:

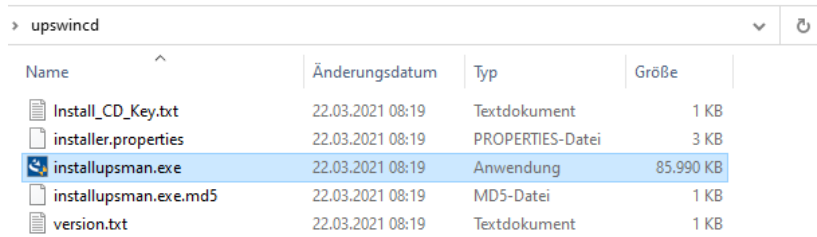


Name	Änderungsdatum	Typ	Größe
Install_CD_Key.txt	22.03.2021 08:19	Textdokument	1 KB
installer.properties	22.03.2021 08:19	PROPERTIES-Datei	3 KB
installupsman.exe	22.03.2021 08:19	Anwendung	85.990 KB
installupsman.exe.md5	22.03.2021 08:19	MD5-Datei	1 KB
version.txt	22.03.2021 08:19	Textdokument	1 KB

The installation assistent starts:




Choose your language and confirm with **OK**.

Introduction:

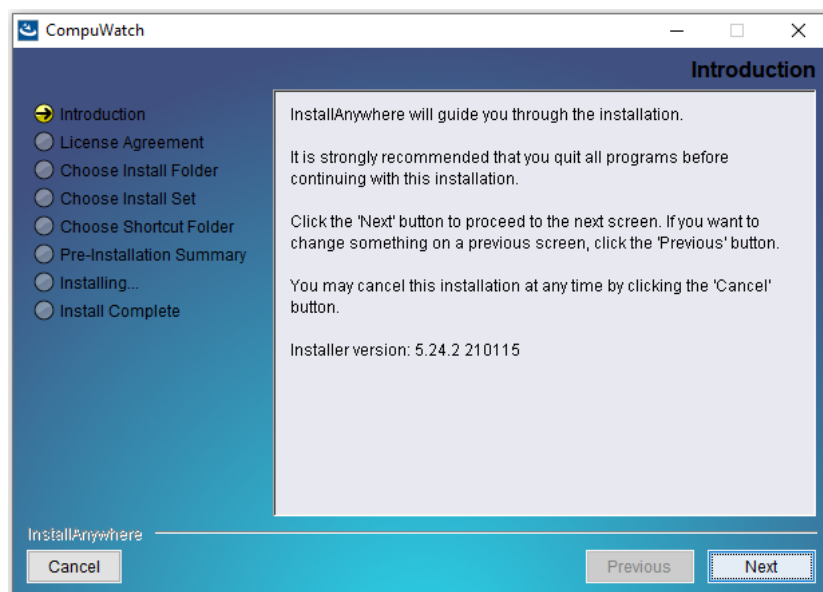

Confirm with **Next**.


Licence agreement

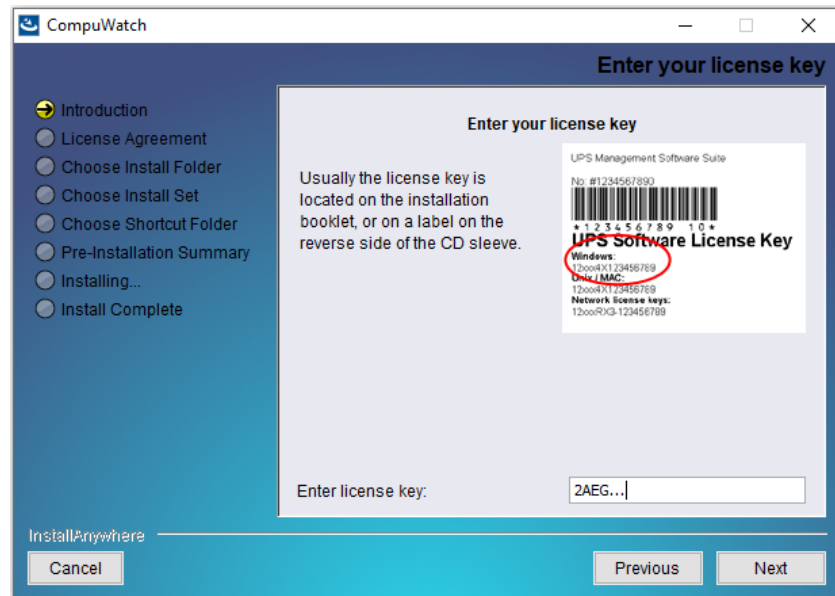


In file **Install_CD_Key.txt** you will find 2 license keys, one for Windows and one for Linux/MacOSX systems. Get the licence key you need and enter it in the input field.

Confirm with **Next**.


Licence agreement acceptance:

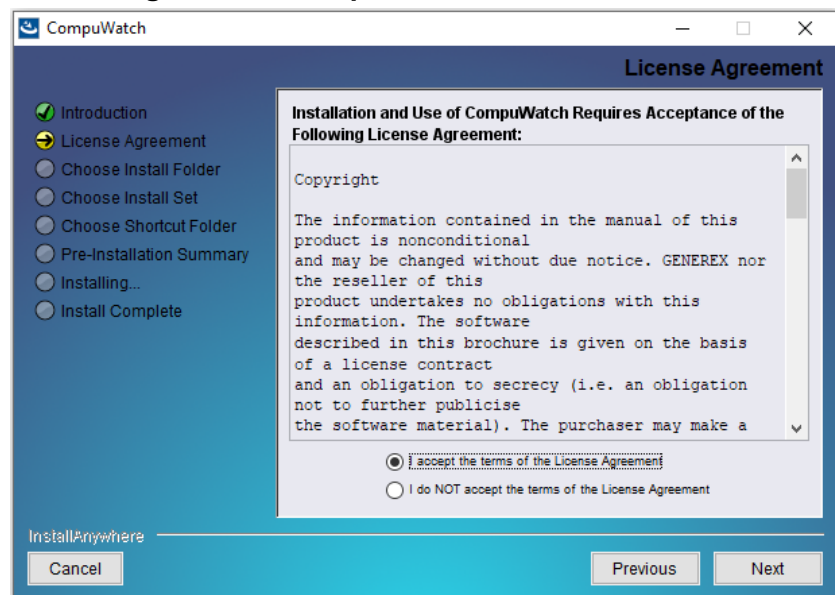

Accept the terms of the License Agreement and confirm with **Next**.

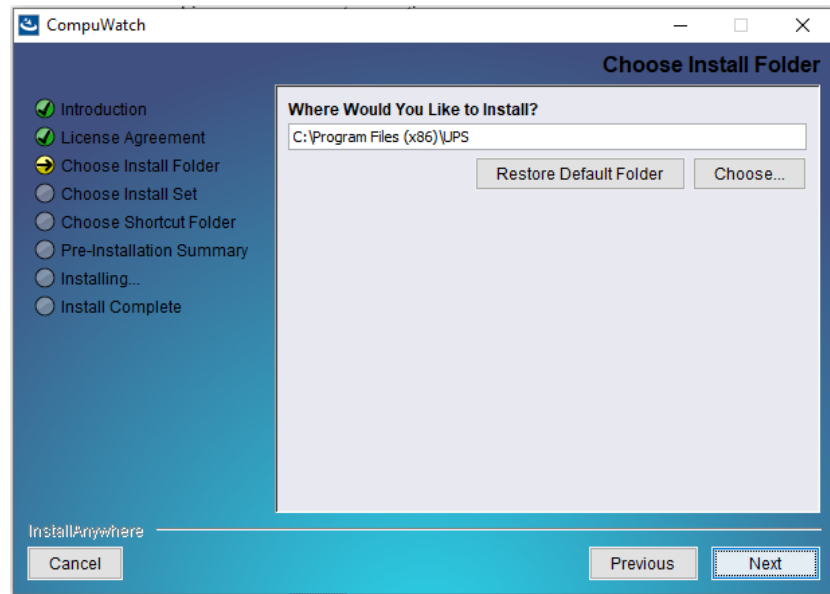Installation folder:

Select the installation folder and confirm with **Next**.

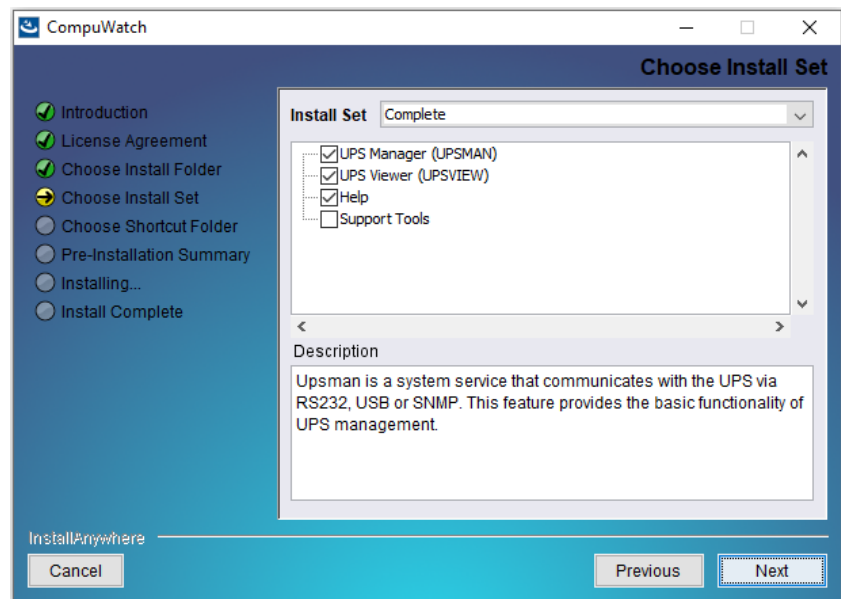Component selection:

Choose the components they have to be installed

UPS Manager (UPSMAN) (essential, default):

The UPS Manager is the central control unit of the UPS software. This component has to be installed!

UPS Viewer (UPSVIEW) (default):

The UPS Viewer is a graphical client for operating and monitoring the connected UPS in a standard web browser.


Help (default):

This is the CompuWatch helpfile which includes the complete manual.


Support Tools (Option) – UPS Monitor Software:

The UPS Monitor Software is a graphical Windows client for operating and monitoring the connected UPS in a separate software (with the same functions as UPS Viewer).

Confirm with **Next**.

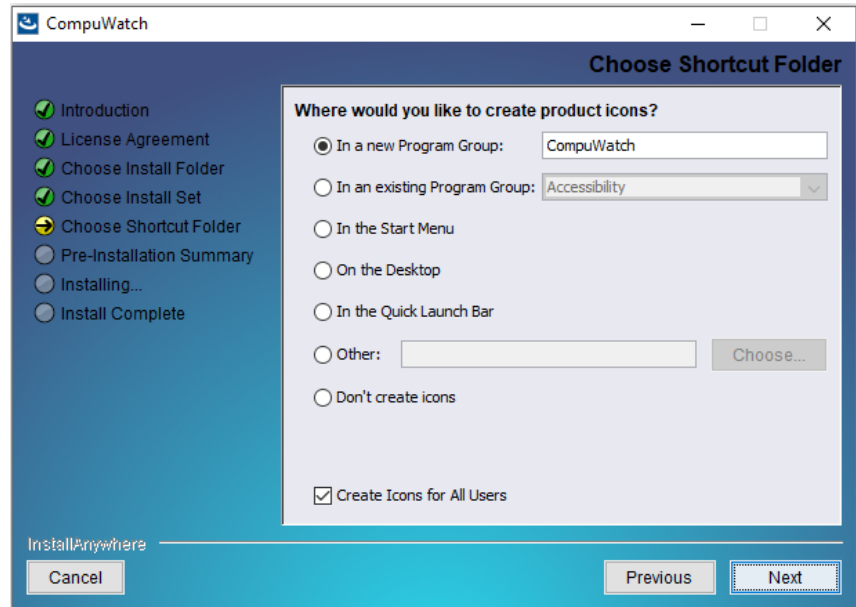
Shortcuts and Icons:

Select the folder for the program icons and confirm with **Next**.

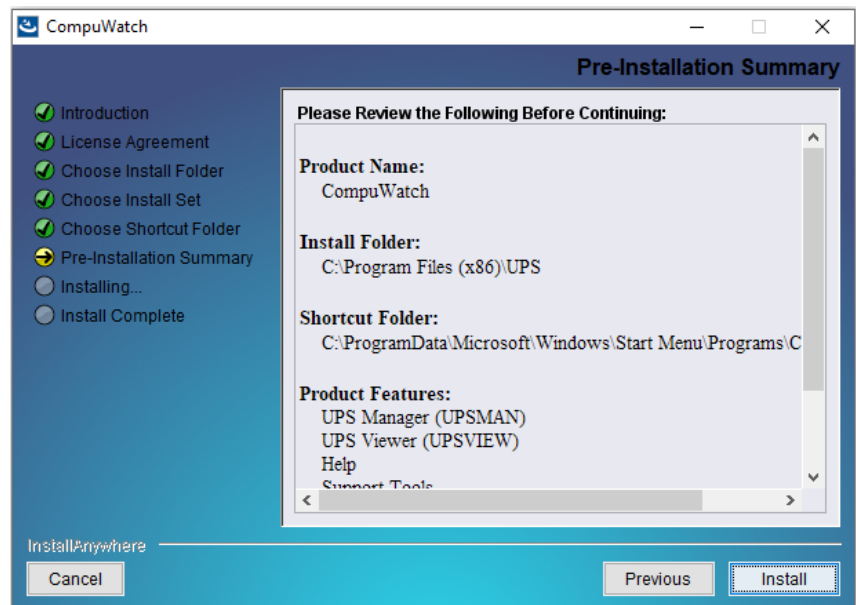
Summary:

Check your inputs and start the install process with **Install**.

Installation process:

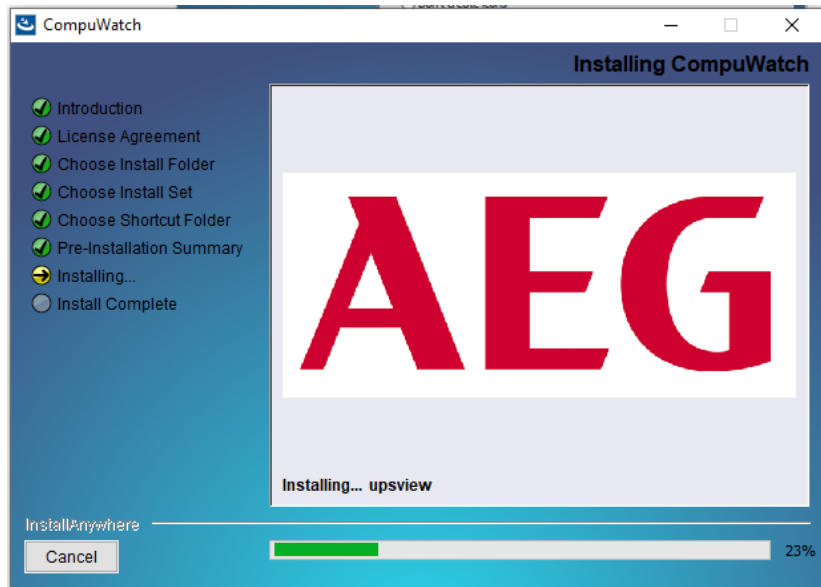


Installation is running...

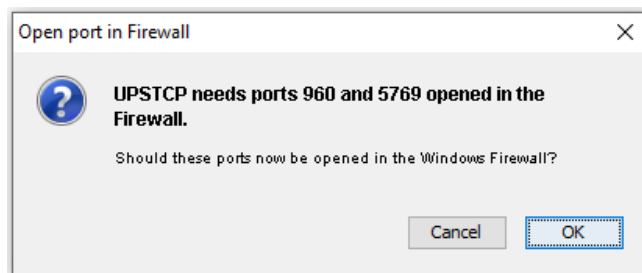

The windows firewall blocks the necessary communication port by default. You have to unlock the port to connect the computer with the UPS and therefore to use Compuwatch. Confirm it with **OK**.

Finish:

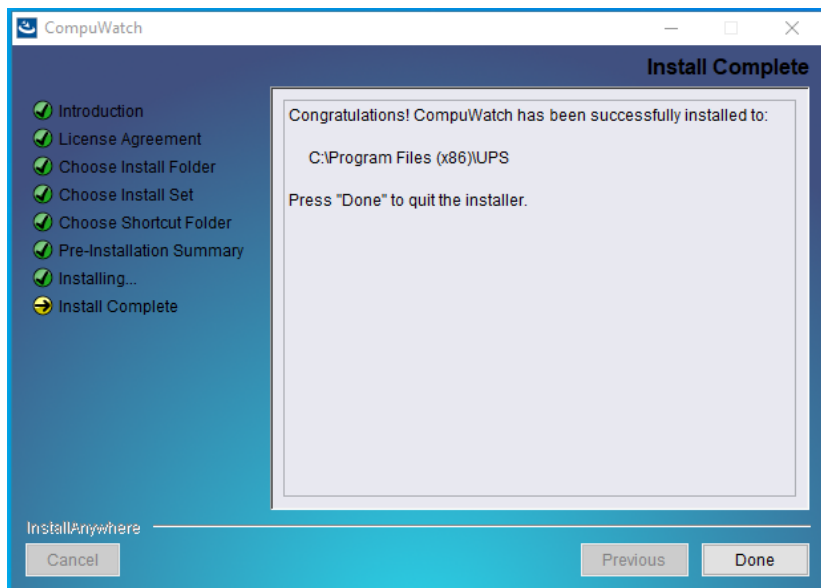

Complete the installation with **Done**. The configuration of UPSMAN will be started.

3. CONFIGURATION

UPSMAN configuration (directly started after Compuwatch installation):

In the configuration window you have to define the UPS model you use. The extension „bl“ stands for „blackline“ and describes a special UPS series. The Search UPS button doesn't work in all configurations, so it is better to configure the main parts (UPS model and Port) manually.

After defining the UPS model, you have to choose the port between UPS and computer.


More configurations are possible under Advanced User, see operating manual.

Confirm your configuration with **OK**.

Confirm UPSMAN-Start.

4. UPS VIEWER

Start UPS Viewer:

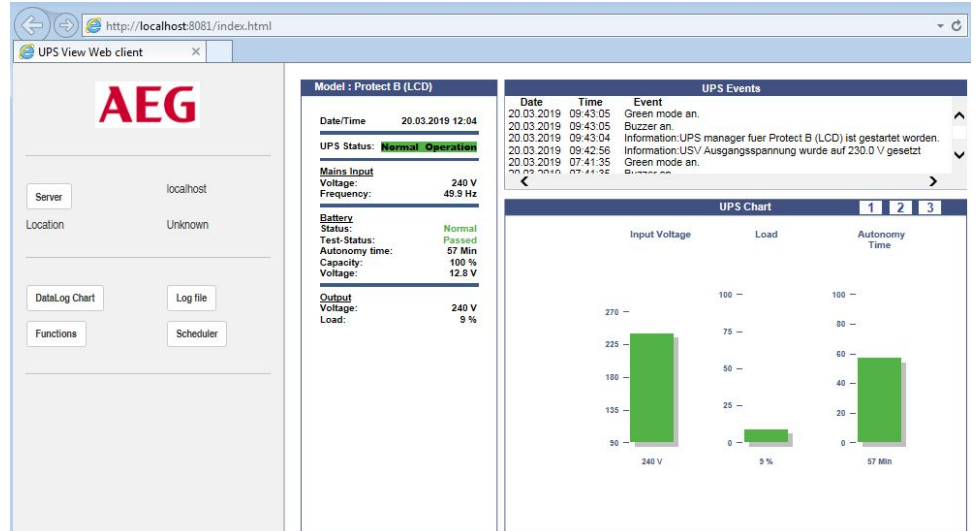

In this screen you see the UPS VIEW webinterface of Protect B (LCD) UPS. It shows the most important UPS data and alarms. The “UPSMANHTTP” windows service is running in the background and provides the data for this webinterface. For more details see user manual of Compuwatch.

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (ак)312-96-26-47	Россия (495)268-04-70	Казахстан (772)734-952-31	

www.aeg.nt-rt.ru | | age@nt-rt.ru